

Powertrain

15A	15A fuse
30	Battery voltage - 30
31	Ground - 31
5A	5A fuse
80A	80A maxi fuse
A11	Engine control module
A12h	Hydrostatic suspension control module
A14e	ABS/ ESP control module
A17	Automatic transmission control module
A20b	BSI module
A23	Steering column control module
A27	Headlight levelling control module
A44	Tyre inflation pressure control module
B35	Yaw rate sensor
bg	beige
bl	blue
br	brown
C	CAN-BUS comfort
G03	Ground in engine compartment LH
G21	Ground by LH A-pillar
ge	yellow
gn	green
gr	grey
hr	pink
i.	System information
lgn	light green
li	purple
M18	Electrohydraulic power steering pump
or	orange
P03	Engine compartment relay-/ fusebox
rt	red
S21ig	Ignition switch
Sh	Shunt
sw	black
ws	white