

transmission fluid level by referring to the left diagram.

13. If the transmission fluid is less than the specified level, add transmission fluid.
If the transmission fluid is greater than the specified level, drain the excess fluid through the drain plug to adjust the transmission fluid to the specified level.
14. Firmly insert the dipstick into the oil filler tube.


13. TRANSFER OIL

M10001000030USA0000010000

Checking transfer oil level

1. Remove the oil filler plug.
2. Check that the oil level is just below the lower edge of the oil filler plug hole.
3. Check that the oil is not excessively foul and has moderate viscosity.
4. Install the oil filler plug and tighten to the specified torque.

Tightening torque: 32 ± 2 N·m (23 ± 2 ft·lb)

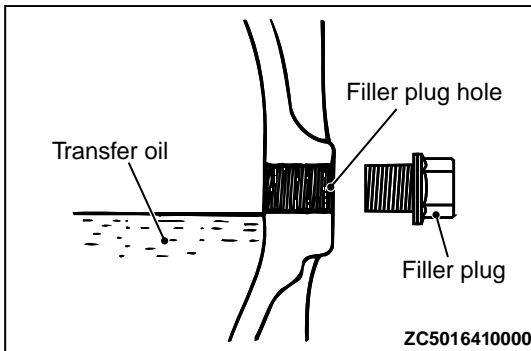

Change transfer oil


1. Remove the oil drain plug to drain the transfer oil.
2. Install the oil drain plug and tighten to the specified torque.
3. Remove the oil filler plug and fill the transfer oil up to the lower edge of the oil filler plug hole.

Brand name: Hypoid gear oil API classification GL-5 SAE 90

Filling amount: 0.53 dm³(0.56 quarts)

4. Install the oil filler plug and tighten to the specified torque.

Tightening torque: 32 ± 2 N·m (23 ± 2 ft·lb)

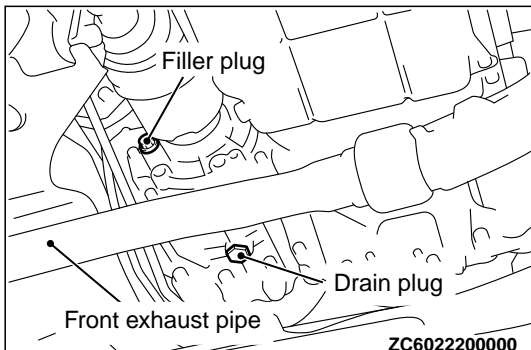

14. ENGINE COOLANT (CHANGE)

M10001000031USA0000010000

Check the cooling system parts such as the radiator, heater and oil cooler hoses, thermostat and their connections for leakage and damage.