


# FUSIBLE LINK AND FUSE



| Name   | Symbol | Name   | Symbol |
|--|--------|--|--------|
| Fuse No.1 to 23 and No.30 to 32 (engine compartment relay box) | B      | Fusible link No.21 (passenger compartment relay box)                       | LHD C  |
|  |        |  | RHD D  |
| Fuse No.2 to 19 (ETACS-ECU)                                    | C      | Fusible link No.24 to 30 (engine compartment relay box)                    | B      |
| Fuse No.22 to 25 (passenger compartment relay box)             | LHD C  |  |        |
|  | RHD D  | Fusible link No.33 to 39 (connected directly to battery positive terminal) | A      |
| Fusible link No.1 and No.20 (ETACS-ECU)                        | C      |  |        |

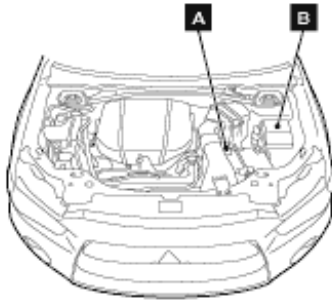

AC900267AD

<LHD>

<RHD>

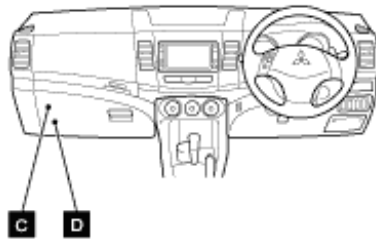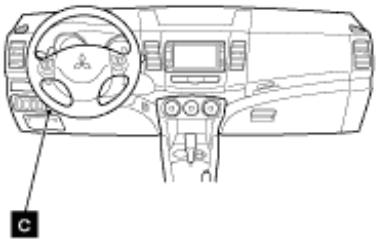

AC602875AF

