

# Product Installation Instructions



**Specialty  
Products  
Company**

**www.SPC-TV.com**

## INSTALLATION INSTRUCTIONS


### EZ CAM XR

1. Take alignment readings and determine amount of camber change needed.
2. Raise vehicle by body pinch welds. Remove tire and wheel assembly.
3. Remove the upper strut-spindle bolt. Line up small tab with cam on bolt. Install bolt with large tab out toward wheel for positive camber or in away from wheel for negative camber. Add lock nut, snug, but do not tighten. Loosen the lower bolt.
4. Reinstall tire and wheel assembly and recompensate alignment equipment. Rotate EZ Cam XR bolt to obtain desired camber reading.

Torque bolts as follows (do not exceed):  
#81240 & 81241 @ 30 ft. lbs. (40Nm)

Always check for proper clearance between suspension components and other components of the vehicle.

5. Complete alignment and road test vehicle.

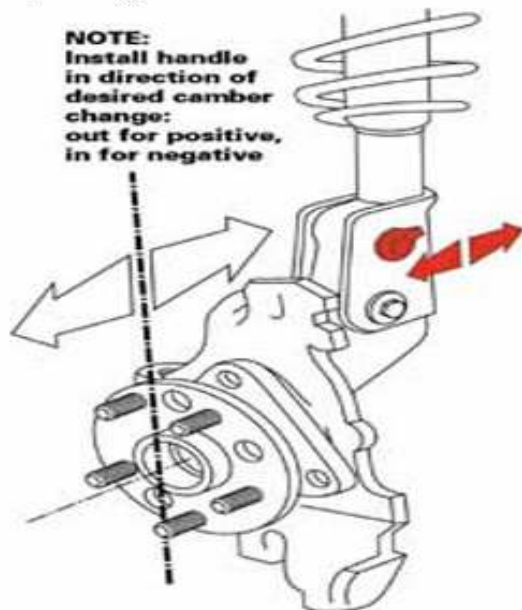

**Niwot Corporation D/B/A Specialty Products  
4045 Specialty Place - Longmont, CO - 80504  
1-800-525-6505**