

### JUNCTION BOX - FUSE BOX (PSF1) IN ENGINE COMPARTMENT :

*ЛЕВОСТОРОННЕЕ РУЛЕВОЕ УПРАВЛЕНИЕ SINCE RPO NO. 09884*

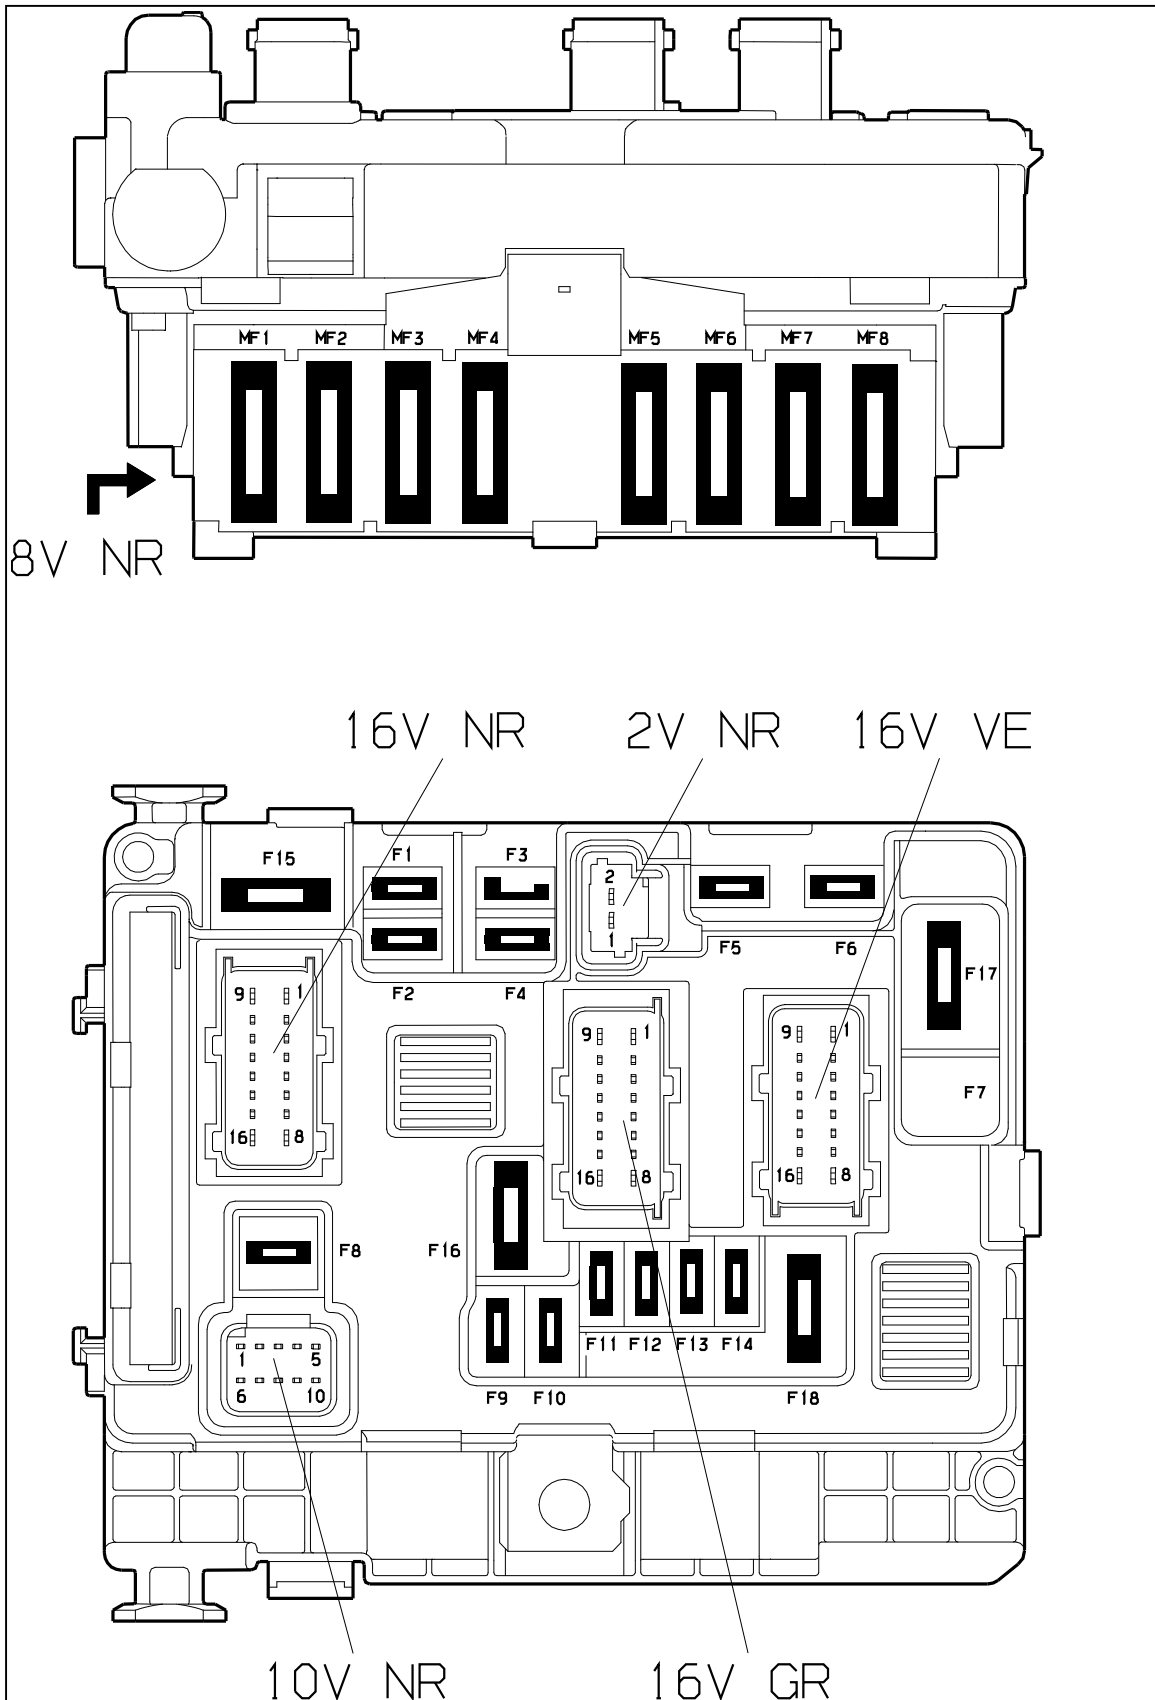


Рисунок : D3AP15QP

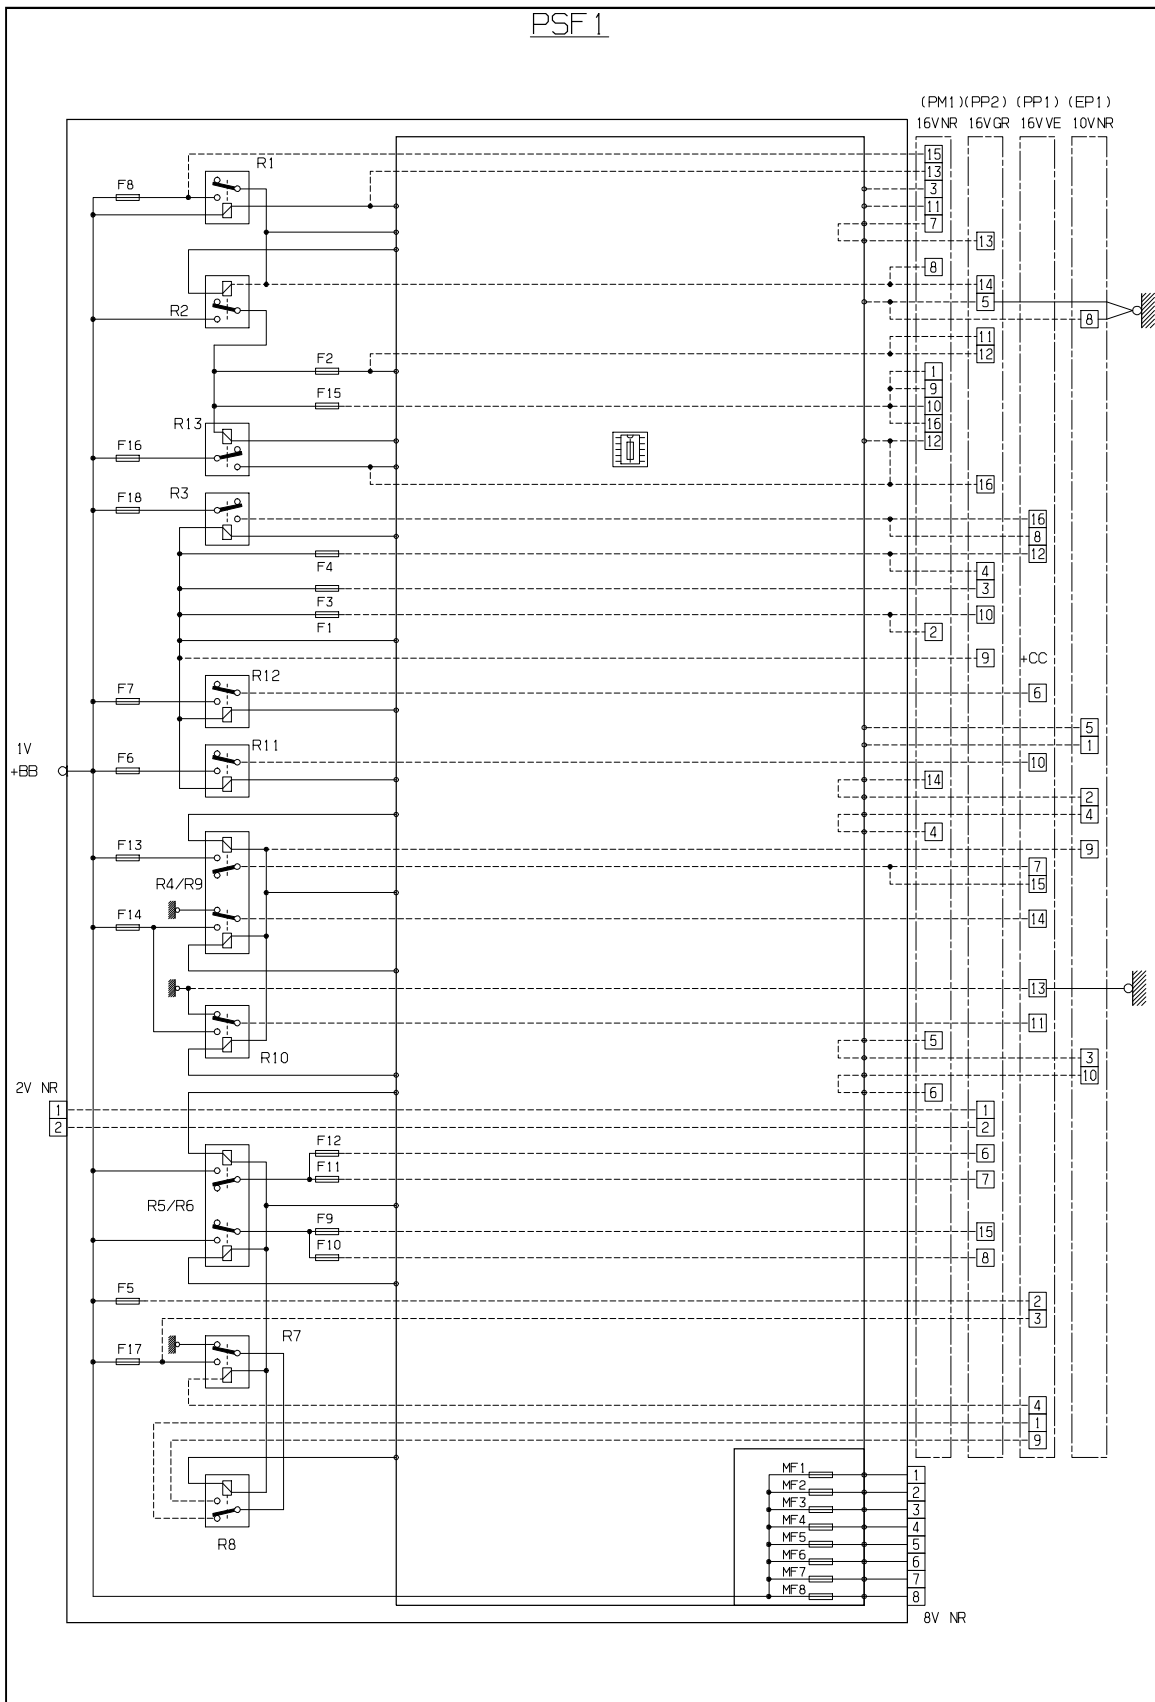


Рисунок : D3AP12TP

Junction box - fuse box (PSF1) in engine compartment			
Fuses	A	Supply	Matching
F1	10A	+CC	Heater unit - vehicle speed sensor - automatic gearbox electrohydraulic block - automatic gearbox control assembly - reverse lamp switch - engine coolant level switch - high speed fan supply relay - air flowmeter - gear lever blocking actuator control relay - starter inhibitor relay
F2	15A		Fuel gauge pump
F3	10A	+CC	Anti-lock brake control unit - ESP ECU
F4	10A		Injection ECU - automatic transmission control unit
F5	10A	+ BB	Automatic transmission control unit
F6	15A		Front fog lamps
F8	20A	+ BB	Injection ECU - diesel fuel high pressure regulator - low speed fan supply relay
F9	15A		Left-hand headlamp - headlamp height adjustment control
F10	15A		Right-hand headlamp
F11	10A		Left-hand headlamp
F12	10A		Right-hand headlamp
F13	15A		Horn
F14	10A		Front/rear screen wash pump
F15	30A		Ignition coil - downstream oxygen sensor - upstream oxygen sensor - cylinder injector 1 - cylinder injector 2 - cylinder injector 3 - cylinder injector 4 - purge canister solenoid valve - diesel injection pump - EGR + butterfly electrovalve - carburettor or throttle housing heater resistor - all or nothing solenoid valve (EGR) - diesel fuel heater - turbocharger pressure regulation solenoid valve
F16	30A		Pulsair pump
F17	30A		Windscreen wiper motor
F18	40A		Heater blower motor - blower control module - passenger compartment air thermistor - engine compartment fusebox panel
MF1	20 - 80A	+BB	Low speed fan supply relay - high speed fan supply relay
MF2	20 - 80A		Anti-lock brake control unit - ESP ECU
MF3	20 -		Anti-lock brake control unit

	80A	
MF4	20 - 80A	Built-in systems interface
MF5	20 - 80A	Built-in systems interface
MF6	20 - 80A	Cabin fusebox 12
MF7	20 - 80A	Ignition switch
MF8	20 - 80A	Additional/autonomous heating burner