


Remove fuel tank and fuel-tank sending unit **1** according to manufacturer's information.

- 2** Large diameter washer
- 3** Copy hole pattern, 6 mm dia. hole




Removing fuel

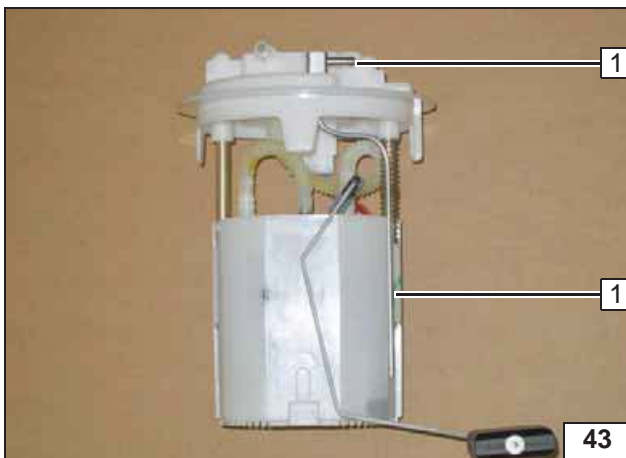

Shape fuel standpipe **1** according to template, cut to length and install.



Installing fuel standpipe

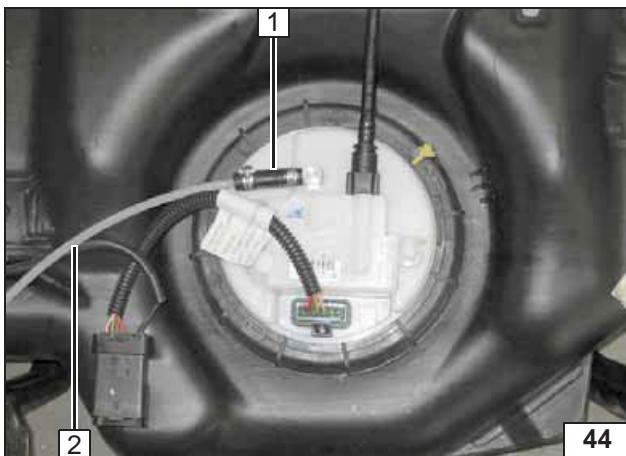


Install fuel-tank sending unit according to manufacturer's specifications.
Install fuel tank in accordance with manufacturer's specifications.

- 1** Hose section, 10 mm dia. Caillau clamp [2x]
- 2** Fuel line



Connecting fuel line

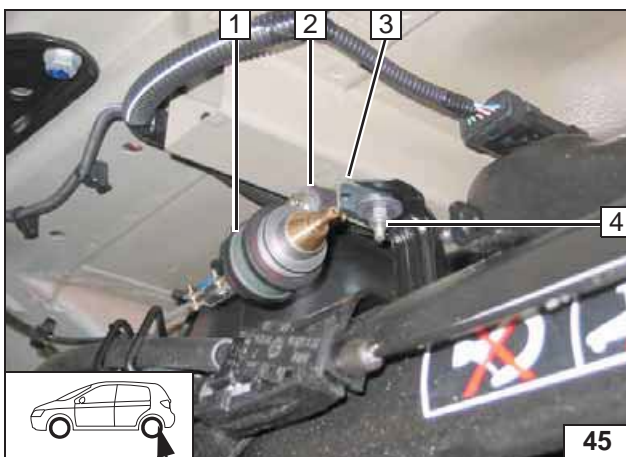

Ensure proper installation position of metering pump, see "Installation Instructions".
Installation location behind vehicle fuel tank!

- 1** Rubber-coated pipe clamp
- 2** Silent block, flanged nut [2x]
- 3** Angle bracket
- 4** Original vehicle nut, washer



Installing metering pump

